


Aeromatic A1032

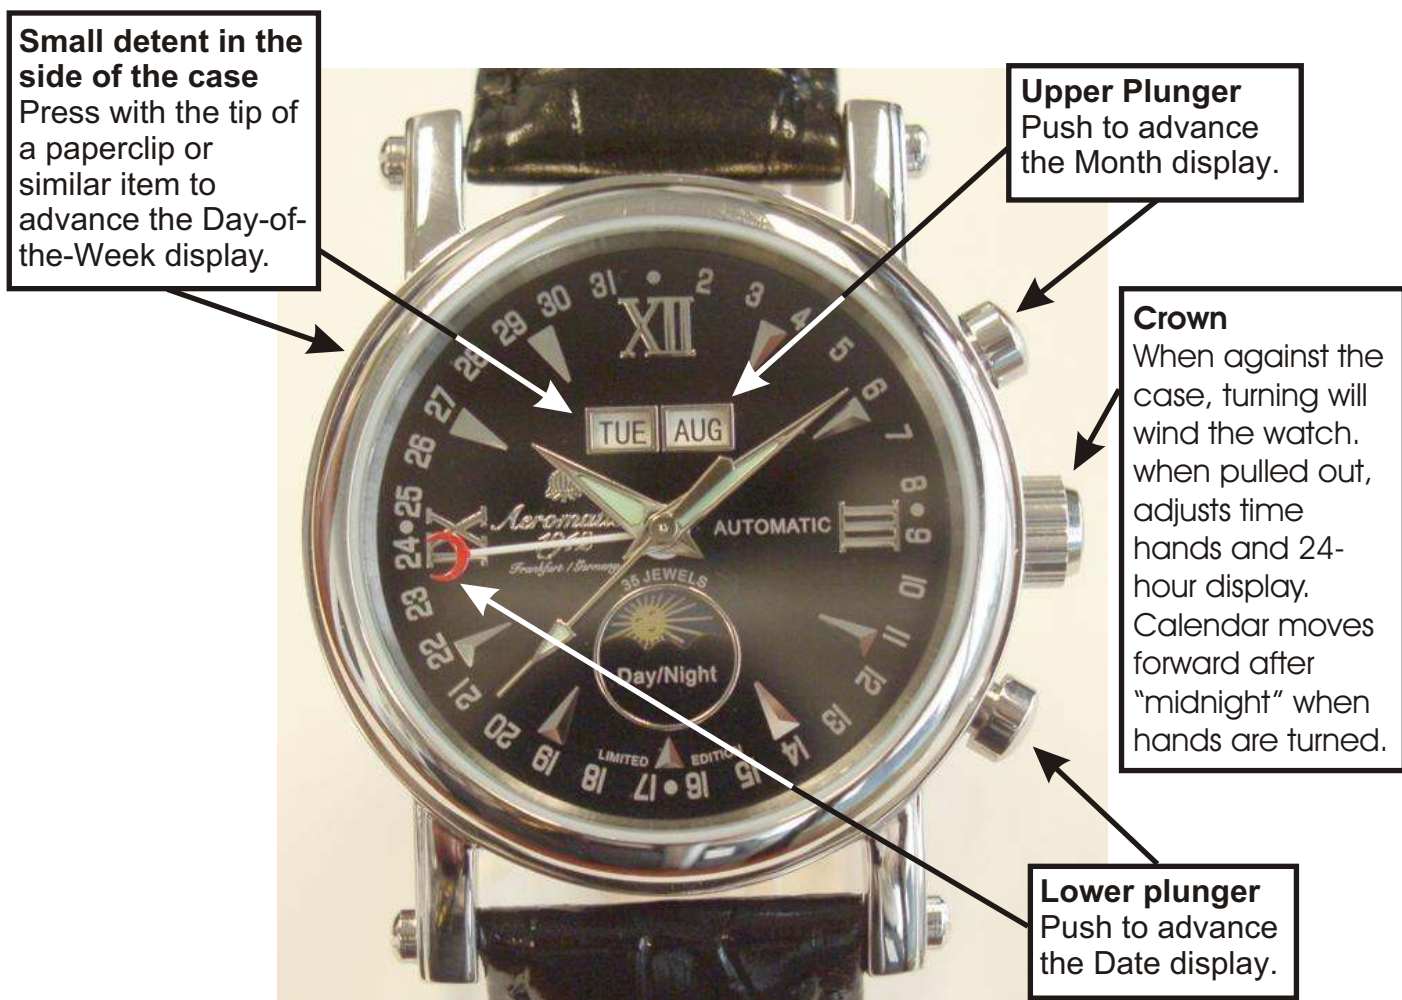

The Aeromatic A1032 has a mechanical movement that self-winds when worn by means of a rotor which is visible through the case-back. The movement can also be manually wound by turning the crown clockwise with the crown in the "first" position which is against the side of the case. Gently pulling the crown out to the "second" position allows the hands to be turned to adjust the "time" display as well as the 24-hour or "Day/Night" display. As the hands pass "midnight" the calendar displays will automatically advance.

Be careful when pushing the detent at the 10:00 position to use something small enough to only press on the center "button" and not to press with excessive force.

Also be careful when wearing the watch not to accidentally press the plungers against the back of your hand when flexing your wrist. This will cause the "Month" or "Date" displays to unexpectedly advance. If this occurs frequently, you may need to wear the watch higher on your wrist.